

Catalogue spare parts models 6-10-15-20 EASY

POS.	DENOMINAZIONE
1	Pinion
2	Bearing
3	Spacer
4	Spiral housing
5	Mechanical tab
6	Spiral
7	Pinion
8	Spacer ring
9	Bearing
10	Bowl housing
11	Spacer ring
12	Mechanical tab
13	Bowl
14	Breaking bar
15	Fixed guard
16	Movable grid protection
17	Foot
18	Lower closing panel
19	Basement
20	Hand protection
21	Cover

POS.	DENOMINAZIONE
22	Back carter
23	Mechanical tab
24	Motor
25	Motor pulley
26	Motor pulley washer
27	Engine tie rod
28	Shaft
29	Transmission pulley
30	Belt
31	Transmission pinion
32	Mechanical tab
33	Bearing
34	Seeger ring
35	Chain
36	Transmission shaft
37	Mechanical tab
38	Bearing
39	Flange Bottom Shaft
40	Flange Upper Shaft
41	Ring spacer
42	Sprocket Shaft Top

POS.	DENOMINAZIONE
43	Chain
44	Pusher
45	Control panel
46	START/STOP button
47	Potentiometer
48	Reverse button
49	Microinteractor
50	Support bracket Microinteractor
51	Cam Microinteractor
52	Eccentric pin
53	Led light
54	Inverter bracket
55	Inverter 110V 50/60 HZ 1PH
56	Inverter 230V 50/60 HZ 1PH
57	Power connector
58	Cable Schuko plug
59	Cable USA plug
60	Cable UK plug
61	Cable Australian plug

